




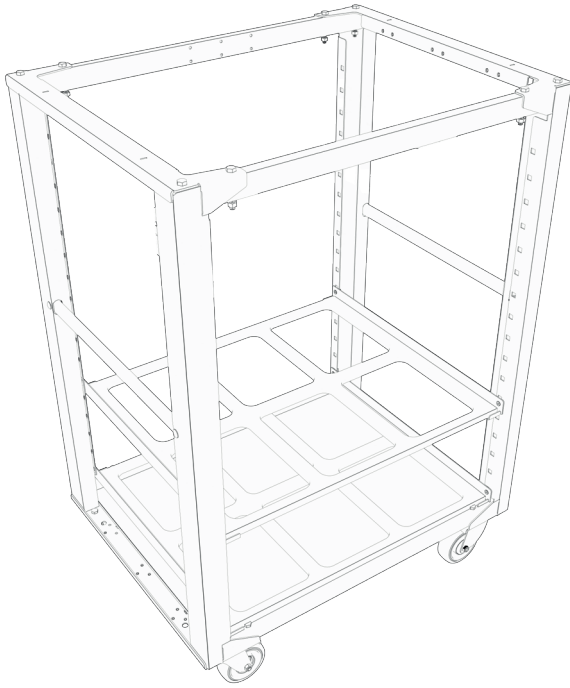

2x Slim-line panel
WAM2P72

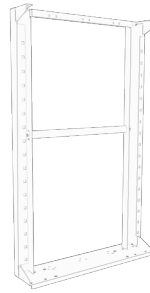


1x Length profiles set L 80
WALPSL080

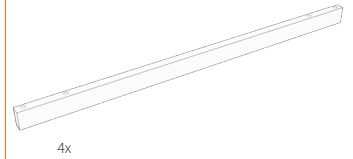


4x

2x Stage Leg cart organiser plate
WAM2SA69

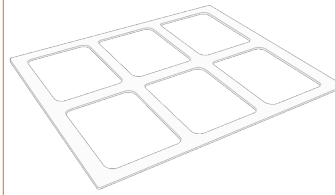


1x Stage Leg cart bottom plate
WAM2SA68

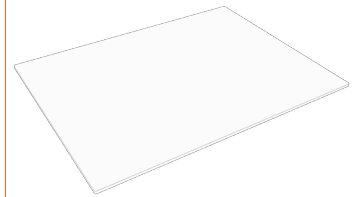


SCOPE

The Admiral Stage leg cart is designed for the organised storage and transportation of stage legs. It provides a flexible storage solution for stage legs of various lengths and is intended for professional use in rental, touring and venue environments.

1x Bolt set modular
transport carts
ZEM2SV10

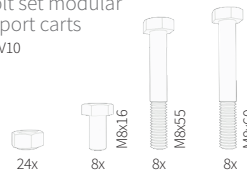


2x Drawer profile set
WAM2R06

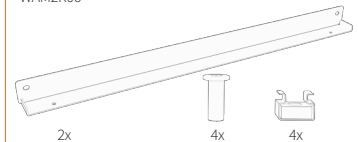


Step 1

Position the castors beneath the side panels. Align the mounting holes and secure each castor (hand-tight) with two M8×16 bolts. Repeat for the second side panel.

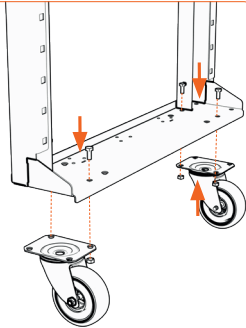


Step 2

Position the length profiles on the bottom flange. Align the outer holes and secure the length profiles and castors (hand-tight) using two M8×55 bolts per side.

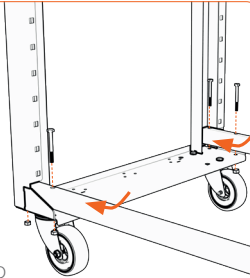


Step 3

Position the upper length profiles beneath the top flange and secure them (hand-tight) with two M8×60 bolts per side.

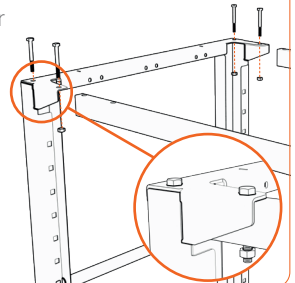


Step 4

Position the second side panel and secure it using the M8×55 bolts at the bottom and the M8×60 bolts at the top. Tighten all bolts to a minimum torque of 25 Nm.

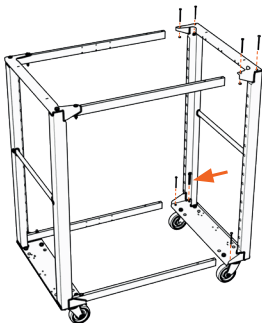


Step 5

Place the bottom plate between the length profiles with the rubber surface facing upwards.

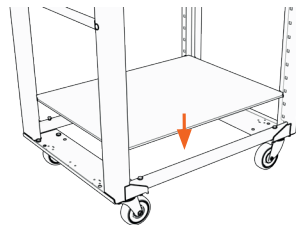


Step 6

Install the cage nuts in the lower mounting positions of both side panels.

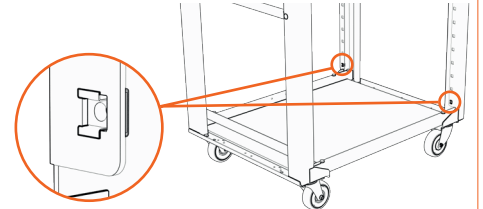


Step 7

Attach the drawer profiles to the side panels using the M6 flathead bolts.

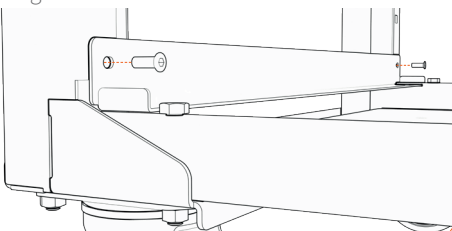


Step 8

Insert the organiser plate into the drawer profiles.

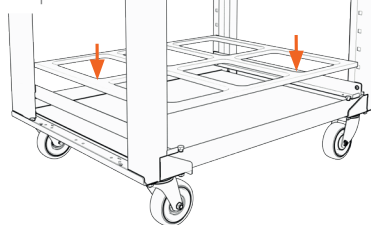


TIP

Determine the shortest stage leg length before installing the next cage nuts. Position the organiser plate to provide adequate support for the shortest legs.

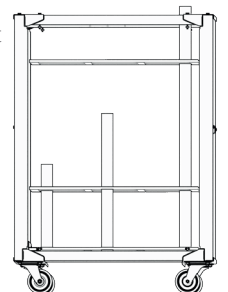


Step 9


Install the cage nuts at the required height.

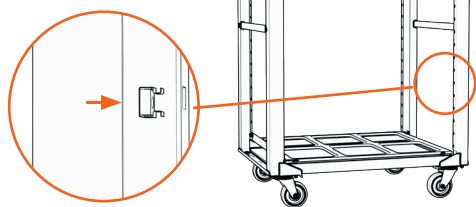**Step 10**

Attach the drawer profiles using the M6 countersunk bolts.

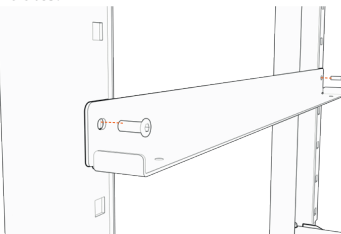**Step 11**

Insert the second organiser plate into the drawer profiles.

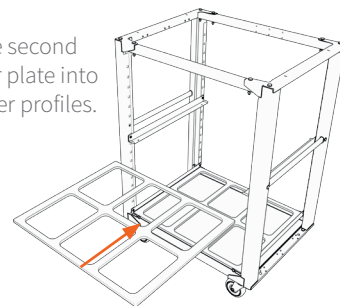

MAINTENANCE & REJECTION CRITERIA



CAUTION

When replacing parts, only use genuine ADMIRAL components.

SAFETY INSTRUCTIONS

The STAGE LEG CART hardly needs any maintenance under normal use and environmental circumstances. For safety reasons however, all parts must be checked regularly for dirt, damages, loss and corrosion.

The STAGE LEG CART shall be checked in compliance with the local law by a competent person. Checking shall take place as often as required but with a minimum of 1x per year. In case of doubt contact ADMIRAL.



WARNING

If damaged, mark the item clearly and take it out of service.

WARRANTY

- For a period of 24 months we will repair, free of charge, any damage attributable to faulty materials or workmanship under the condition that the equipment is forwarded, freight paid, to our warehouse or one of the ADMIRAL distributors' warehouses.
- The warranty-period begins with the day of the delivery, proven by a purchase receipt like an invoice or delivery note or their copies.
- The warranty does not cover damage due to transport, negligent handling, overloading the equipment or parts subject to normal wear and tear signs. Nor damages that originate from a case of misuse because of non observance of the safety regulations in this instruction manual.
- The warranty will be invalid when other parts than the original ADMIRAL parts have been used or modifications of our design have been made by third parties.
- Warranty repairs do not renew nor extend the warranty-period.
- In case of a claim that falls under the warranty, e.g. a malfunction or spare part requirements please contact your point of sale or ADMIRAL.
- The manufacturer is not liable for indirect consequential damage and financial loss.
- The manufacturer shall not be liable for any changes made to the STAGE LEG CART parts nor for any damage resulting from such changes.



ADMIRAL
STAGING

| www.admiralstaging.com | Josink Kolkweg 10 | 7545 PR Enschede | The Netherlands | Tel: +31 53 4 301 201 |